

12.1.6 Distribution

The wind farm operator must make the current HHAM available to the contracted Air Operator(s), relevant authorities as needed, and to the USCG and other relevant entities involved in aerial emergency response. These users, including their contact details, must be noted in a corresponding list in the manual.

